To change WRT54G or WAP54G settings, go to Control Panel, Network Connections and click on Local Area connection. Then right click on it and click properties. Then scroll to you see the Internet Protocol and click on it to select it, then click on Properties





🔒 Local Area Conne	ection Properties	?
General Advanced		
Connect using:		
Broadcom 440x	10/100 Integrated C	Configure
This connection uses th	he following items:	
🔽 😽 Auto Internet	Protocol	~
🔽 🐻 Internet Prote	ocol (TCP/IP)	
<		×
I <u>n</u> stall	<u>U</u> ninstall	P <u>r</u> operties
Description Transmission Control wide area network p across diverse interco ✓ Show icon in notific ✓ Notify me when this	I Protocol/Internet Proto rotocol that provides co connected networks. ation area when conne connection has limited	ocol. The default ommunication cted or no connectivity
		Cancel

Change to use static IP address like below, then click OK. Typically both IP and DNS settings should be set to Obtain Automatically. You only do the static setting if you want to hook the WRT54G or WAP54G directly to your computer to change configuration settings.

Internet Protocol (TCP/IP) Pr General	roperties ? 🔀
You can get IP settings assigned this capability. Otherwise, you nee the appropriate IP settings.	automatically if your network supports ed to ask your network administrator for
O <u>O</u> btain an IP address automa	atically
✓ ● Use the following IP address	:
IP address:	192.168.1.100
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.1.1
O Dbtain DNS server address	automatically
── Use the following DNS serve	er addresses:
Preferred DNS server:	
Alternate DNS server:	
	Advanced
	OK Cancel

For WAP54G, plug Ethernet cable into Desktop or Laptop and then into Ethernet connection on back of WAP54G. There is only one for the Access Point. Click and then make sure your Local Internet Connection is Enabled. If not, right mouse click on it and enable it.

To access Linksys WAP54G Setup, key 192.168.1.245 in Internet Explorer address and press enter. It should take you to the Setup page without asking for sign-on credentials which are blanks. Login Name = Password =

For WRT54G, plug Ethernet cable into Desktop or Laptop and then into any one of the 4 Ethernet ports on back of WRT54G. Do not plug it into the single Internet port.

Currently, Operating Mode = Router (use this if your ISP modem/router is the DHCP server)

Make sure your Local Internet Connection is Enabled. If not, right mouse click on it and enable it.

To access Linksys WRT54G setup, key 192.168.1.25 in Internet Explorer address and press enter. The login and password are set as follows. You can change it once you get things set up the way you want them.

Login Name = admin Password =

WRT54G IP address set to 192.168.1.25 (if Operating Mode = Gateway, set IP Address = 192.168.1.1 and DHCP Server "Enabled)

🖉 Basic Setup - Windows Internet Explorer			
S → E http://192.168.1.25/		💌 🗟 🐓 🗙 🚼 Google	
Eile Edit View Favorites Iools Help			
X Norton Vorton Safe Search 🕜 Search	Z + (Cards & Logins +		
🚖 Favorites 🛛 🛔 🏉 Suggested Sites 👻 🙋 Free Hotmail 🙋 Web Sli	ce Gallery 🕶	👌 • 🕲 - 💷	🖶 🔹 Page 🔹 Safety 👻 Tools 👻 🔞 👻
C Basic Setup			
	Wireless-G Broadl	band Router WRT54G	<u>_</u>
Setup	Access Applications	Administration Status	_
	Setup Wireless Security Restrictions & Gaming Basic Setup DDNS MAC Address Clone Ad	dvanced Routing	
Internet Setup Internet Connection Type	Automatic Configuration - DHCP	Automatic Configuration - DHCP: This setting is most commonly used by Cable	
Optional Settings (required by some ISPs)	Router Name: WRT54G	operators. Host Name: Enter the host name provided by your ISP.	
	Domain Name: MTU: Auto Size: 1500	Domain Name: Enter the domain name provided by your ISP. More	
Network Setup Router IP	Local IP Address: 192.168.1.25	Local IP Address: This is the address of the router.	
	Subnet Mask: 255.255.0	Subnet Mask: This is the subnet mask of the router.	
Network Address Server Settings (DHCP)	DHCP Server: O Enable O Disable		
	Starting IP Address: 192.168.1. Maximum Number of 50 DHCP Users:	DHCP Server: Allows the router to manage your IP addresses.	
	Client Lease Time: minutes (0 means one day)	Starting IP Address: The	~
Done		🔯 🍚 Internet	🖓 🔹 🔍 100% 👻 🛒

WRT54G Router setup with Operating Mode = Router (Setup\Advanced Routing)

🖉 Advanced Routing - Windows Internet Explorer	
C C C Attp://192.168.1.25/Routing.htm	Sociel P
Eile Edit Yiew Favorites Iools Help X Norton Norton Safe Search Image: Search Image: Search	Cards & Logins +
🖕 Favorites 🛛 👍 🏉 Suggested Sites 🔻 🙋 Free Hotmail 🤌 Web Slic	e Gallery 🔹 🔊 - 🖃 🖶 🔹 Page + Safety + Tools + 😨
C Advanced Routing	
LINKSYS®b	y Cisco Firmware Version: v1.02.8
	Wireless-G Broadband Router WRT54G
Setup	Setup Wireless Security Restrictions & Gaming Administration Status
	Basic Setup DDNS MAC Address Clone Advanced Routing
Advanced Routing Operating Mode	Router Connection, select Gateway mode. If another router exists on your network, select Router
Dynamic Routing	RIP: Disabled mode.
Static Routing	Select set number: 10 Image: Delete This Entry Select Set Number: This is the unique route number, you may set up to 20 routes.
	Enter Route Name: Enter the name you would like to assign to this
	Destination LAN IP: 0 0 0 10 Subnet Mask: 0 0 0 0 0 Default Gateway: 0 0 0 0 0
	Interface: LAN & Wireless Subnet Mask: Determines the host and the network portion. Show Routing Table More
Done	🔽 🚱 Internet 🦓 🔹 🔍 100% 👻

WAP54G IP address set to 192.168.1.245 AP Mode = Wireless Repeater MAC Address = 00:14:BF:8B:78:23 of Router WRT54G)

🖉 Linksys - Windows Internet Explorer				
		✓ 🗟 4	🗙 🚼 Google	P -
Eile Edit View Favorites Tools Help				
× Norton - Norton Safe Search 🕜 Search	🧭 ▼ 🛛 🕞 Cards & Logins 🔹			
🖕 Favorites 🛛 👍 🌈 Suggested Sites 🔻 🙋 Free Hotmail 🖉 Web Sli	ce Gallery 🔻		👌 • 📾 - 🖃	🖶 🔹 Page 🔹 Safety 👻 Tools 👻 🔞 👻
C Linksys				
LINKSYS [®] A Division of Cisco Systems, Inc.		Firm	ware Version: 3.04	<u>^</u>
	w	ireless-G Access Point	WAP54G	
Setup	Setup Wireless Administration Status			
	Network Setup AP Mode			
LAN MAC Address	00:16:B6:9E:4C:2B	<u>Help</u>		
	O Access Point (default)			
	O AP Client			
	Remote Access Point's LAN MAC Address: Site Survey			
	Wireless Repeater			
	Remote Access Point's LAN MAC Address: 00:14:BF:8B:78:23			
	O Wireless Bridge Remote Wireless Bridge's LAN MAC Addresses:			
				1200
Done	Note: When set to "AP Client" and "Wireless Bridge" mode this device will on	htv	🔯 😜 Internet	🖌 🖓 🕈 🔍 100% 👻

Wireless Connection to WAP54G SSID=Repeater (AP Mode = Wireless Repeater, MAC Address pointing to Router WRT54G)



Wireless Connection to SSID=My Linksys (WRT54G) WRT54G connected to FiOS router thru port 1 on back of WRT54G.



Wireless Connection to WAP54G SSID=Repeater Sample Speed Test from Dell Laptop with Wireless G Adapter

🖉 Speakeasy Speed Test - Windows Internet Explorer			7 🗙
COO - Whttp://www.speakeasy.net/speedtest/		💌 🗟 🗲 🗙 Google	• 9
Eile Edit View Favorites Iools Help X Norton v Norton Safe Search Image: Search Image: Search	🖉 + 🔐 Cards & Logins 👻		
🚖 Favorites 🛛 🚔 🏉 Suggested Sites 🔻 🖉 Free Hotmail 🌢	😰 Web Slice Gallery 🔻	🚵 🔻 🖾 👘 🖾 🖶 Zafety 🕶 Tools 🔹	•
>>> Speakeasy Speed Test			
Speakeas Speedkeas Speedkeas Speedkeas Choose a location: Seattle, wa San Francisco, ca San San Geles, ca Solos angeles, ca Solos	VOICE + DATA FOR BUSINESS T T T T T T T T T T T T T T T T T T	<section-header><text><text><text></text></text></text></section-header>	
		😜 Internet 🦓 👻 🔍 100%	•