


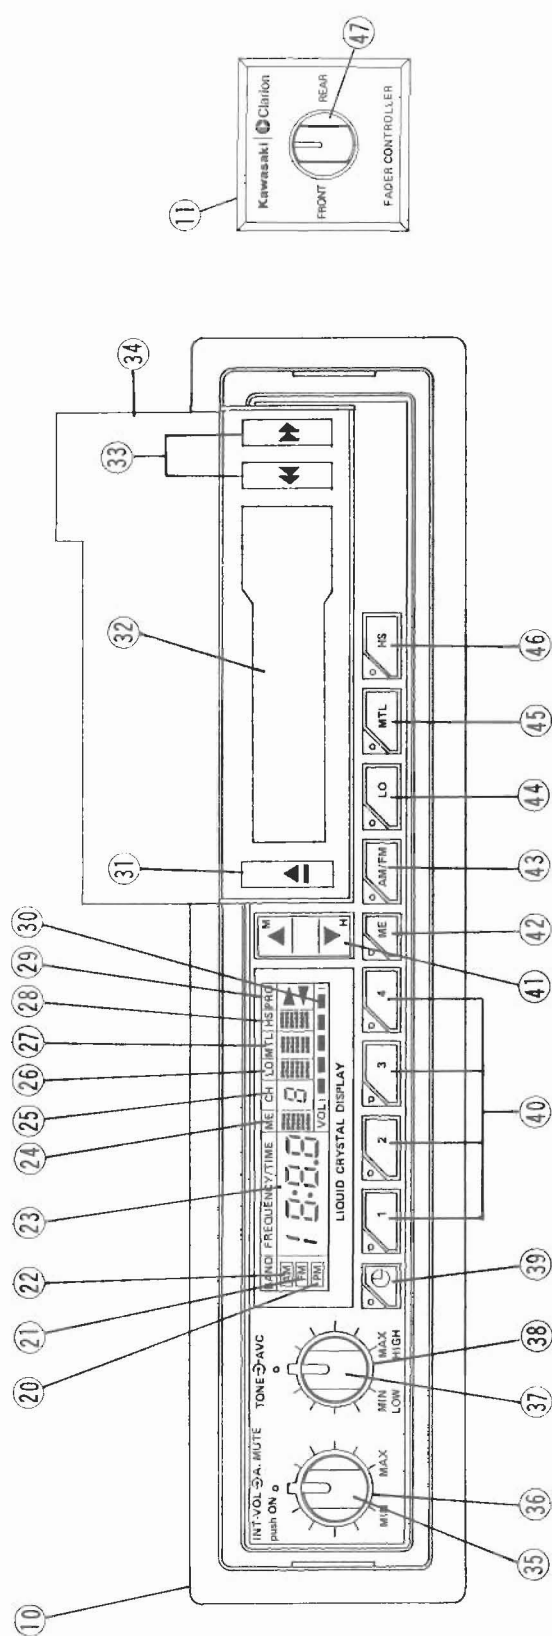

- 20. PM Indicator
- 21. FM Indicator
- 22. AM Indicator
- 23. Radio Frequency/Time Display
- 24. Memory Indicator
- 25. Preset Channel Indicator
- 26. Local Indicator
- 27. Metal Indicator
- 28. Helmet Sound Indicator (Optional)
- 29. Program Indicator
- 30. Volume Indicator
- 31. Stop/Eject Button
- 32. Tape Slot
- 33. F.F./Rew. Buttons
- 34. Tape Slot Door
- 35. Power Switch/Intercom Volume Control (Optional)
- 36. Muting Level Control (Optional)
- 37. Tone Control
- 38. Auto Volume Control
- 39. Time Readout Button
- 40. Preset Tuning Buttons
- 41. Manual Tuning/Time Adjusting Switch
- 42. Memory/Adjusting Button
- 43. Radio Band Select Button
- 44. Local Button
- 45. Metal Button
- 46. Helmet Sound Button (Optional)
- 47. Fader Control
- 48. Transmission Indicator (Optional)
- 49. Receiving Indicator (Optional)
- 50. Power Switch/Volume Control (Optional)
- 51. Channel Indicator (Optional)
- 52. Squelch Control (Optional)

